

INSTALLATION INSTRUCTIONS

EXHAUST VENT

To be installed prior to siding

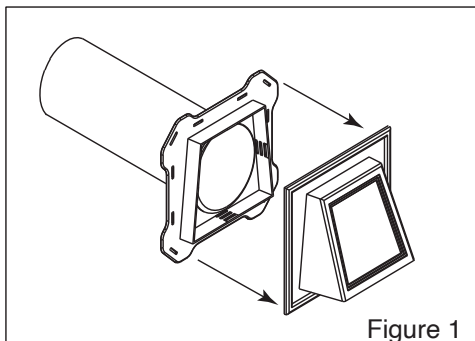


Figure 1

Step 1

Remove the trim ring from the Hooded Dryer Vent Assembly. See Figure 1.

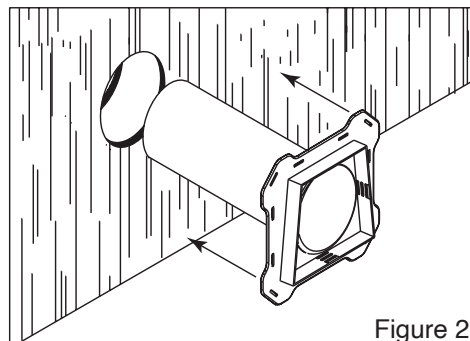


Figure 2

Step 2

Place tape or sealant between the Hooded Dryer Vent and house. Align the Hooded Dryer Tube with the available opening. (Suggested hole size: 4 1/8" diameter.) See Figure 2.

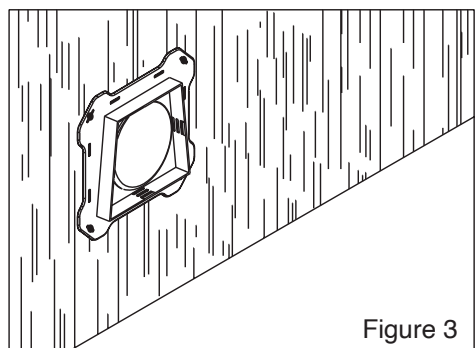


Figure 3

Step 3

Attach the Hooded Dryer Vent using an 8d nail or equivalent (to include a #8 x 1" long or #8 x 1 1/2" long Zinc Coated Screw) with a minimum of four attachments. See Figure 3.

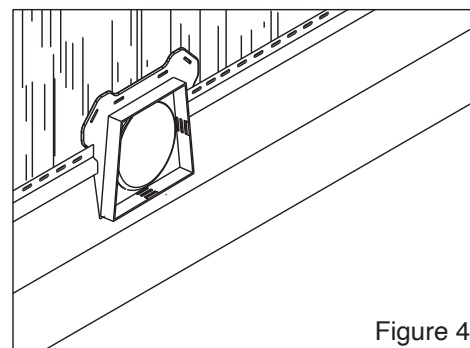


Figure 4

Step 4

Install the siding per the manufacturer's installation instructions. See Figure 4.

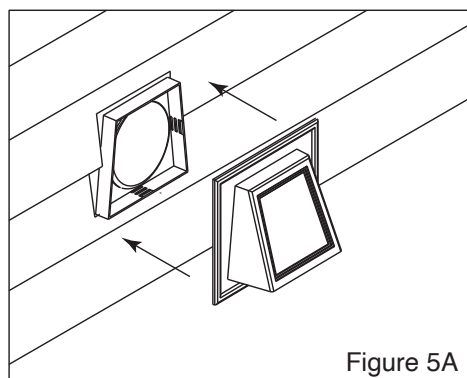


Figure 5A

Step 5

Lock on the finishing trim ring. See Figures 5A and 5B.

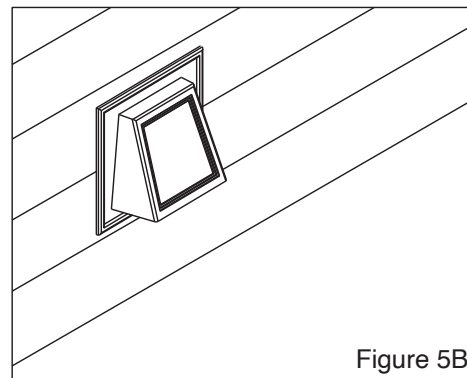


Figure 5B